



## ARC-19254,8,6 (H.264) DVR - Search, Backup & Playback Instructions

The media disks below are tested and recommended. CD-R, CD+R, DVD-R and DVD+R are not compatible.

- **SanDisk** USB Drive 2.0 (strongly recommended for easy and faster backup)
- Sony CD-RW 4X 700MB (CD-RW Drive is required)
- Memorex CD-RW 4X 700MB (CD-RW Drive is required)
- Memorex DVD-RW 4X 4.7GB (DVR-RW Drive is required)
- Imation DVD-RW 4X 4.7GB (DVR-RW Drive is required)
- Staples DVD-RW 4X 4.7GB (DVR-RW Drive is required)

### SEARCH - DVR CONTROL PANEL

- Press SEARCH
- Select CALENDAR SEARCH, TIME SEARCH, or EVENT SEARCH. (follow the instruction to locate the right date and time)
- To stop while playing, press Stop

### BACKUP - DVR CONTROL PANEL

- Insert a USB drive or CD-RW/DVD-RW
- Press MENU
- Select COPY and press ENTER
- Select MEDIA FORMAT
- Select FORMAT MEDIA: USB\_Front or INTERNAL CD-RW/DVD (using +- key)
- Select MEDIA FORMAT and press ENTER

#### Note:

- Both USB drive and CD-RW/DVD-RW must be formatted before copying.
- For CD-RW/DVD-RW, it takes about 30-45 min depending on the disk brand and storage.
- When format is completed, you will see a message "Formatting Successful". The Media Total will list 3820MB(USB 4GB), 572MB(CD-RW), and 4486MB(DVD-RW).
- After format, press MENU
- Select COPY and press ENTER
- Select COPY and press ENTER
- Select MEDIA: USB\_Front or INTERNAL CD-RW/DVD (using +- key)
- Select START TIME, END TIME and press ENTER
- Enter password: 11111111 (enter your own if you change the default password)
- Wait until it is completed

### PLAYBACK - COMPUTER

- Install the DVR-Viewer software (SETUP.EXE file on the CD. If you loss your CD software, you can download it from [http://www.arcvisioncctv.com/support\\_dsoftware.php](http://www.arcvisioncctv.com/support_dsoftware.php) ARC-19254/ARC-19258/ ARC-19256 Download 4CH/8CH/16CH H.264 MULTIPLEX DVR Viewer)
- Insert a USB drive or CD-RW/DVD-RW
- Open the DVR-Viewer software (DVR-Viewer icon on your desktop)
- Ignore the fist login window by clicking OK
- Click FILE SEARCH
- Click FOLDER SELECT to locate a USB drive(removable disk) or CD-RW/DVD-RW and click OK
- Click PLAY
- Press ENTER
- Enter password: 11111111 (enter your own if you change the default password)