



## ARC-19304,8,9,16,17 DVR - Search, Backup & Playback Instructions

The media disks below are tested and recommended. CD-R, CD+R, DVD-R and DVD+R are not compatible.

- **SanDisk** USB Drive (strongly recommended for easy and faster backup)
- Sony CD-RW 4X 700MB (CD-RW Drive is required)
- Memorex CD-RW 4X 700MB (CD-RW Drive is required)
- Memorex DVD-RW 4X 4.7GB (DVR-RW Drive is required)
- Imation DVD-RW 4X 4.7GB (DVR-RW Drive is required)
- Staples DVD-RW 4X 4.7GB (DVR-RW Drive is required)

### SEARCH - DVR CONTROL PANEL

- Press SEARCH
- Select CALENDAR SEARCH, TIME SEARCH, or EVENT SEARCH (and follow the instruction to locate the right time)
- To stop while playing, press LIVE

### BACKUP - DVR CONTROL PANEL

- Insert a disk onto CD-Rom drive
- Press MENU
- Select COPY and press ENTER
- Select MEDIA FORMAT
- Select FORMAT MEDIA: INTERNAL CD-RW/DVD (using +- key)
- Select MEDIA FORMAT and press ENTER

#### Note:

- Both USB drive and CD-RW/DVD-RW must be formatted before copying.
- For CD-RW/DVD-RW, it takes about 30-45 min depending on the disk brand and storage.
- When format is completed, you will see a message "Formatting Successful". The Media Total will list 3820MB(USB 4GB), 572MB(CD-RW), and 4486MB(DVD-RW).
- After format, press MENU
- Select COPY and press ENTER
- Select COPY and press ENTER
- Select MEDIA: INTERNAL CD-RW/DVD (using +- key)
- Select START TIME, END TIME and press ENTER

### PLAYBACK - COMPUTER

- Install the DVR-Viewer software (**SETUP.EXE** file on the CD)
- Insert a disk to CD-ROM drive or connect USB Drive to the USB port
- Open the DVR-Viewer software (DVR-Viewer icon on your desktop)
- Ignore the first login window by clicking OK
- Click FILE SEARCH
- Click FOLDER SELECT to locate the CD-ROM drive or USB Removable drive and click OK
- Click PLAY